Hercules Tools for Android
User's Manual

Version 1.3

©2013 UniSVR Global Information Technology Corp.

© UniSVR Global Information Technology Corporation

Table of Contents

Copyright, Trademarks and Important Information 3
Limited Warranty 4
Brief Introductions 5
Register HermesDDS Account and Download HermesDDS AP 5
Instructions for Hercules Tools / Android 9
- Admin Login 9
- List of Settings 10
- Password Configurations 11
- General Settings 11
- HermesDDS Configurations 12
- Device Configurations 12
- Local Viewing 14
- Network Setting 15
- Date/Time Settings 16
- Maintenance 16

© UniSVR Global Information Technology Corporation

Copyright, Trademarks and Important Information

Copyright

© 2011 UniSVR Global Information Technology Corp.

Trademarks

UniArgus is a registered trademark of UniSVR Global Information Technology Corp.
Microsoft and Windows are registered trademarks of Microsoft Corporation.
All other trademarks mentioned in this document are trademarks of their respective owners.

Disclaimer

This document is intended for general information purpose only, and due care has been taken in its preparation.
Any risk arising from the use of this information rests with the recipient, and nothing herein should be construed as constituting any kind of warranty.
UniSVR Global Information Technology Corp. reserves the right to make adjustments without prior notification.
All names of people and organizations used in this document's examples are fictitious. Any resemblance to any actual organization or person, living or dead, is purely coincidental and unintended.

Limited Warranty

Limited Warranty Statement

UniSVR Global Information Technology Corp.("UniSVR") warrants its products to be free from defects in workmanship and materials, under normal use and service, for the applicable warranty term.

As new technologies emerge, older technologies become obsolete and UniSVR will, at its discretion, replace an older product in its product line with one that incorporates these newer technologies. At that point, the obsolete product is discontinued and no longer support.

Warranties Exclusive

If a UniSVR product does not operate as warranted above, customer's sole remedy shall be repair or replacement of the product in question, at UniSVR's option. The foregoing warranties and remedies are exclusive and are in lieu of all other warranties or conditions. Express or implied, either in fact or by operation of law, statutory or otherwise, including warranties or conditions of merchantability and fitness for a particular purpose. UniSVR neither assumes nor authorizes any other person to assume for it any other liability in connection with the sale, installation, maintenance or use of its products. UniSVR shall not be liable under this warranty if its testing and examination disclose the alleged defect in the product does not exist or was caused by customer's or any third person's misuse, neglect, improper installation or testing, unauthorized attempts to repair, or any other cause beyond the range of the intended use, or by accident, fire, lightening, or other hazard.

Limitation of Liability

In no event, whether based in contract or tort (including negligence), shall UniSVR be liable for incidental, consequential, indirect, special, or punitive damages of any kind, or for loss of revenue, loss of business, or other financial loss arising out of or in connection with the sale, installation, maintenance, use, performance, failure, or interruption of its products, even if UniSVR or its authorized reseller has been advised of the possibility of such damages.

Some country do not allow the exclusion of implied warranties or the limitation of incidental or consequential damages for consumer products, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, which may vary from country to country. Nothing in this warranty shall be taken to affect your statutory rights.

© UniSVR Global Information Technology Corporation

Introductions

Hercules IPcam Sharing Software (HISS for short) and Hercules IPcam Sharing Box (HISB for short) are Windows software and dedicate hardware, respectively, which can share IP cameras within the subnet to your friends or remote viewers. With HermesDDS Service, users can make connections easily from the Internet and view videos anytime.

You can view videos by running Hercules Viewer with HermesDDS AP on PC, or eLook Mobile Viewer APP on Android device. In addition, you can record videos with NVR series products which includes UniArgus Express (Windows software), UniArgus Express Lite (Windows software), UniVRT (Windows software), eLook iNVR (hardware), and eLook iVRT (hardware).

Register HermesDDS Account and Download HermesDDS AP

HermesDDS Service enables users to make connections on the Internet even with DHCP address. Users can connect to one another across firewalls easily without complicated network settings.

1. Please go to www.hermesdds.com with a browser (IE, Chrome, or Firefox) and click [Register for Free].

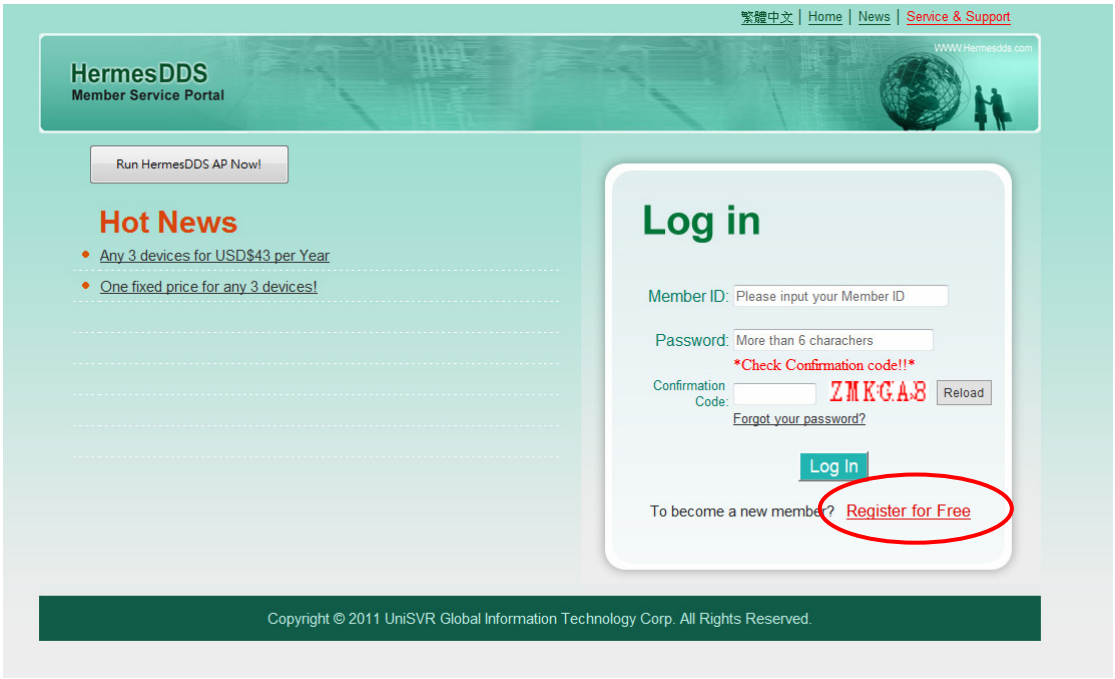
繁體中文 | Home | News | Service & Support
HermesDDS
Member Service Portal
Run HermesDDS AP Now!
Hot News
Any 3 devices for USD$43 per Year
One fixed price for any 3 devices!
Log in
Member ID: Please input your Member ID
Password: More than 6 charachers
Check Confirmation code!!
Confirmation Code: ZMKGA8 Reload
Forgot your password?
Log In
To become a new member? Register for Free
Copyright © 2011 UniSVR Global Information Technology Corp. All Rights Reserved.

2. Activate the verification letter sent to your registered e-mail address.
3. Login to HermesDDS with your registered member ID, password, and confirmation code displayed on the page.
4. Go to the Home Page of HermesDDS Service. Click [Add New Device].

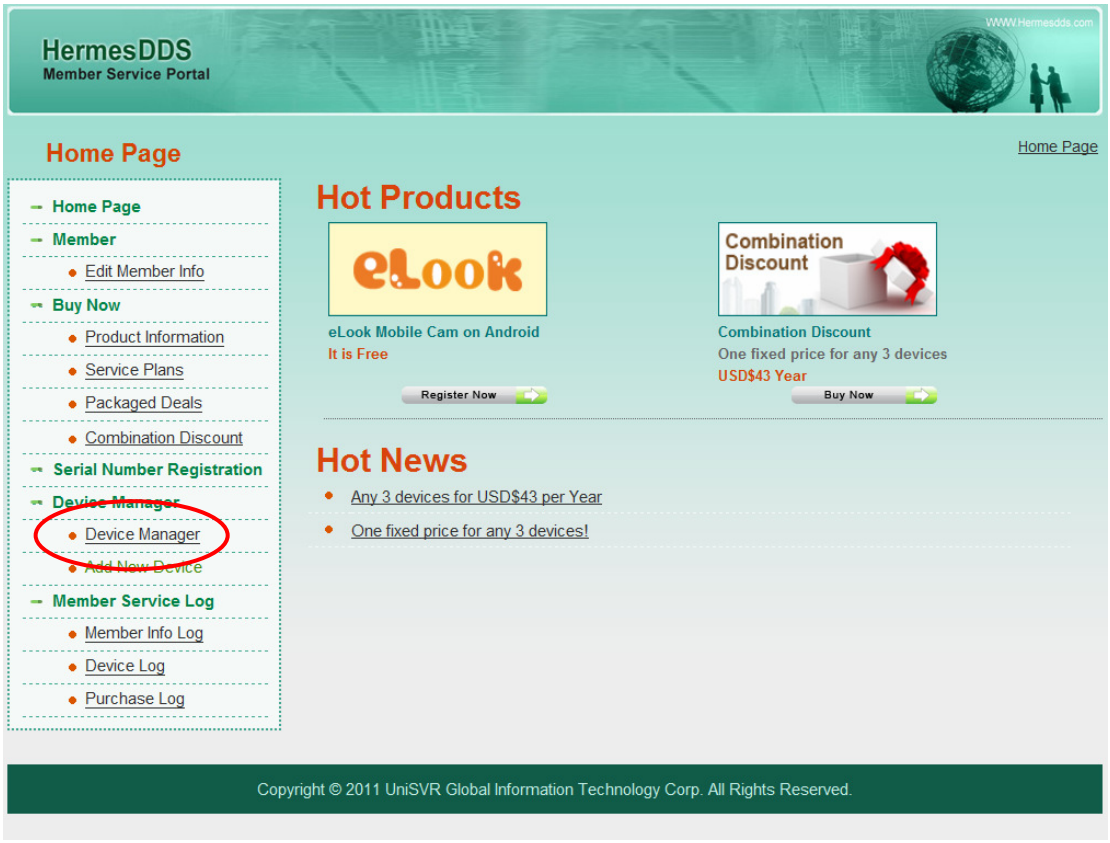

5. Type the required information and click [Next]
   (1) Device Brand: UniSVR
   (2) Device Model: Hercules IPcam Sharing
   (3) Service Plan: Select the service plan based on your need
   (4) Device Name: Type the device name you want to use on HermesDDS AP
   (5) Nick Name: Type the device name you want to use on HermesDDS AP
   (6) Contact Person 1: Type your name
   (7) Contact E-mail: Type your e-mail address
   ☆Other information is optional

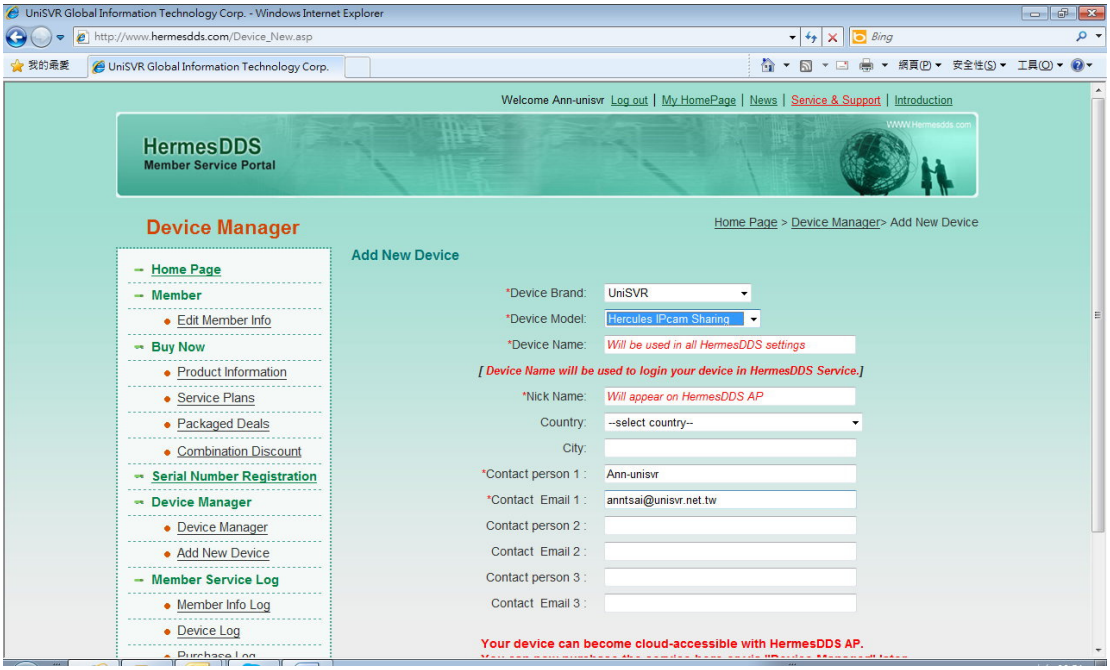
UniSVR Global Information Technology Corp. - Windows Internet Explorer
http://www.hermesdds.com/Device_New.asp
Welcome Ann-unisvr Log out | My HomePage | News | Service & Support | Introduction
HermesDDS
Member Service Portal
Device Manager
Home Page > Device Manager> Add New Device
Add New Device
Home Page
Member
Edit Member Info
Buy Now
Product Information
Service Plans
Packaged Deals
Combination Discount
Serial Number Registration
Device Manager
Device Manager
Add New Device
Member Service Log
Member Info Log
Device Log
*Device Brand: UniSVR
*Device Model: Hercules IPcam Sharing
*Device Name: Will be used in all HermesDDS settings
[Device Name will be used to login your device in HermesDDS Service.]
*Nick Name: Will appear on HermesDDS AP
Country: --select country--
City:
*Contact person 1 : Ann-unisvr
*Contact Email 1 : anntsai@unisvr.net.tw
Contact person 2 :
Contact Email 2 :
Contact person 3 :
Contact Email 3 :
Your device can become cloud-accessible with HermesDDS AP.

6. Click [Next].

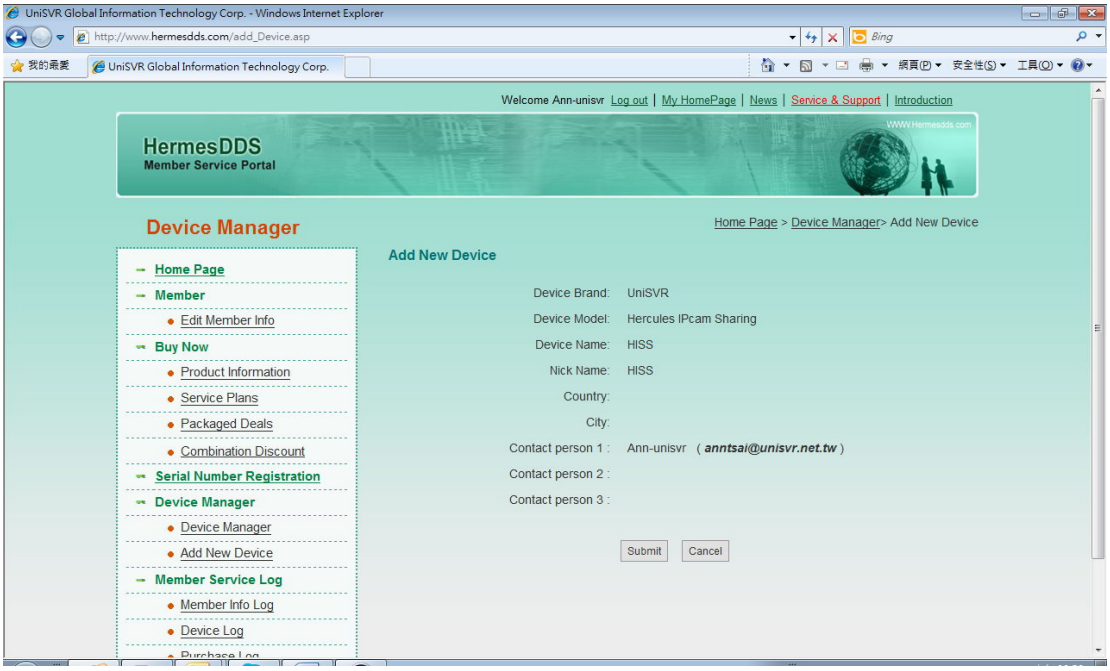

7. Click [Submit] and you can see the newly added device by clicking [Device Manager].

© UniSVR Global Information Technology Corporation

8. Go to http://www.unisvr.net/download.asp to download HermesDDS AP on your computer.
9. Run hermessetup.exe to install the software.
10. Run HermesDDS AP (Start→All Programs→HermesDDS→HermesDDS AP). Login to HermesDDS AP with HermesDDS account and password.
11. If you can see the name of your device below "My Device", and the icon of the device is orange, your registration has been successful.

© UniSVR Global Information Technology Corporation

Instructions for Hercules Tools / Android

Download and install Hercules Tools from Google Play for free!

Admin Login

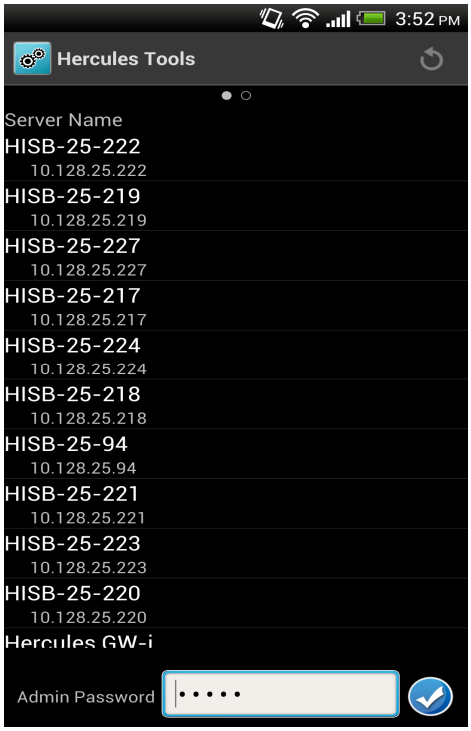

Run Hercules Tools on your Android device

1. Accessible HISS/HISB(s) will be displayed on the device list automatically
2. Or you can click on the upper right of the title bar to refresh the list.
3. Admin Password: The admin password to login HISS/HISB. The default is 12345.
4. Click to login

If you want to type in IP address manually, slide the screen to the left.

1. Type the IP address of HISS/HISB server.
2. Click to login.

© UniSVR Global Information Technology Corporation

List of Settings

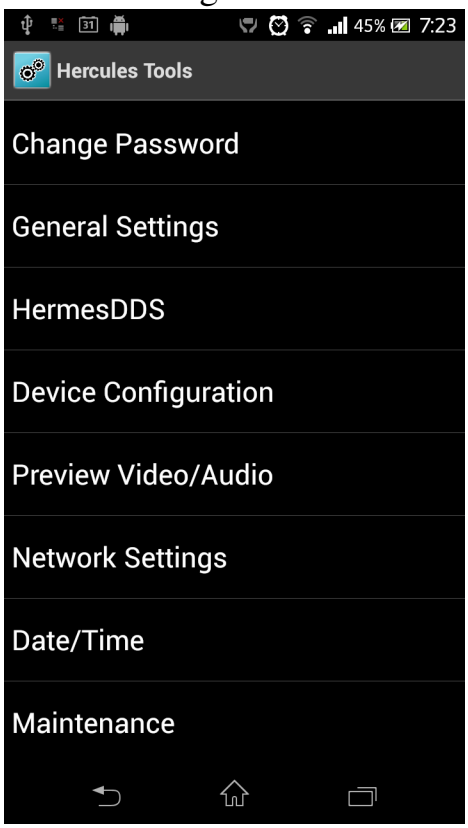

After logged in, a list of settings will be displayed.

[NOTE: The list of settings may differ due to the type of devices.]

© UniSVR Global Information Technology Corporation

Password Configurations

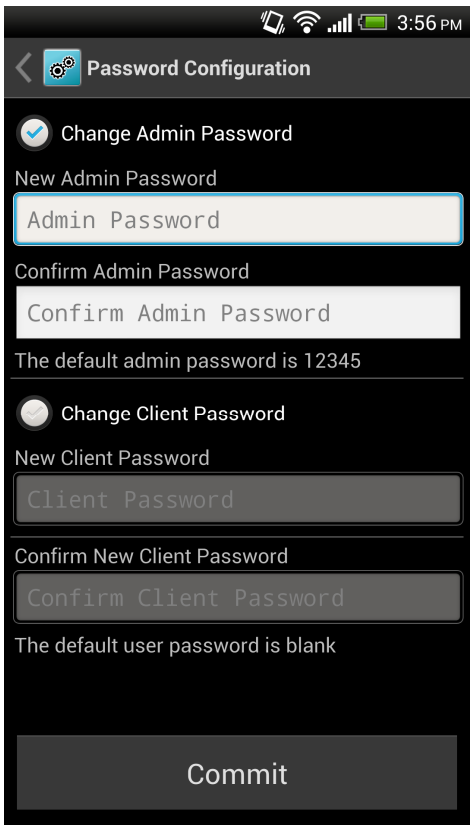

1. Tick the box before the password which you want to reset.
2. Type the password which you want to use and click [Commit] to make the configurations effective.
3. You will be redirected to the list of settings.

General Settings

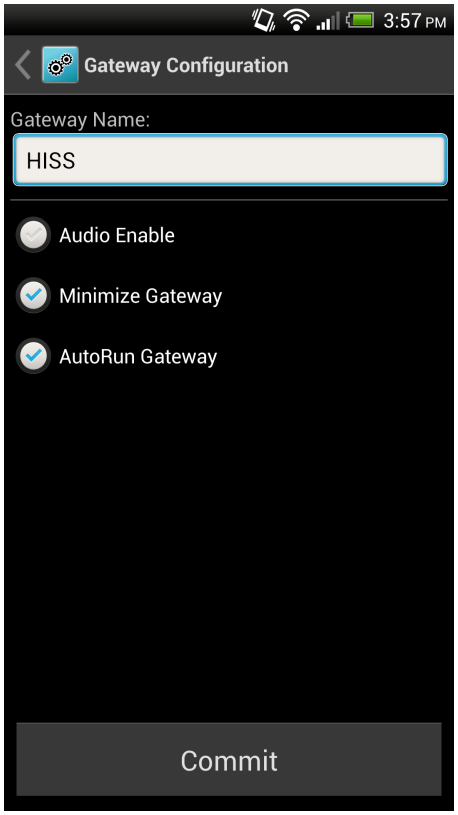

1. Gateway Name: Type the name for the Gateway which you want to use. This name will be displayed on the auto-search list.
2. Audio Enable: If you tick the circle, audio will be collected by the device.
3. Minimize Gateway: If you tick the circle, HISS will be minimized automatically.
4. AutoRun Gateway: If you tick the circle, HISS will be started automatically when you start the computer.

[NOTE: The general settings may differ due to the type of devices.]

© UniSVR Global Information Technology Corporation

HermesDDS Configurations

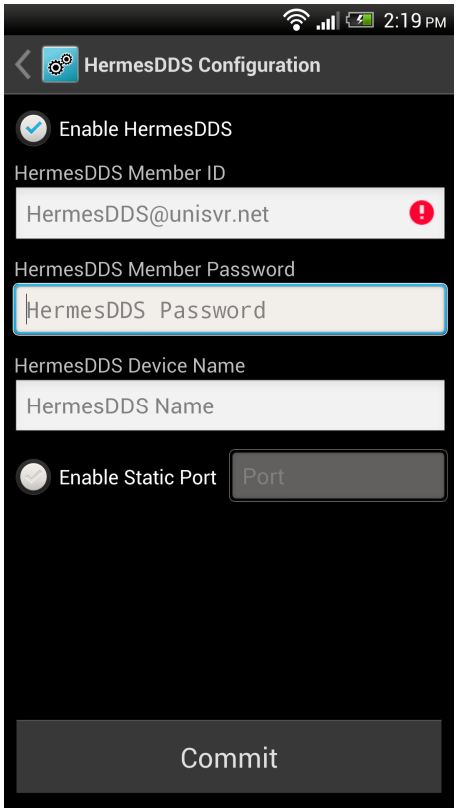

1. Enable HermesDDS: If you tick the circle, HermesDDS service will be enabled.
2. HermesDDS Member ID: Type the member ID which you registered on HermesDDS Service Portal.
3. HermesDDS Member Password: Type the corresponding password which you use to login the account.
4. HermesDDS Device Name: Type the name of the device which you have purchased the plan of on HermesDDS Portal.
5. Enable Static Port: HermesDDS Service will make connections depending on the network environment. If your network environment requires specific port or you want to use a static port.
6. Port: If you use a static port, type the port number.
7. Click [Commit] to make the configurations effective.

Device Configurations

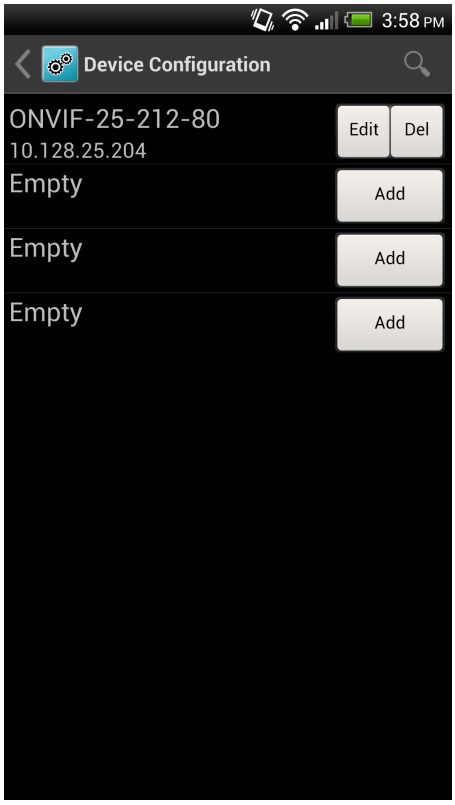

Connect a camera to HISS/HISB

1. Add: Add a new camera to HISS/HISB.
2. Edit: Edit the settings of the camera.
3. Del: Delete the camera from the list.

[NOTE: If is not displayed on the upper right, auto-searching is not supported.]

© UniSVR Global Information Technology Corporation

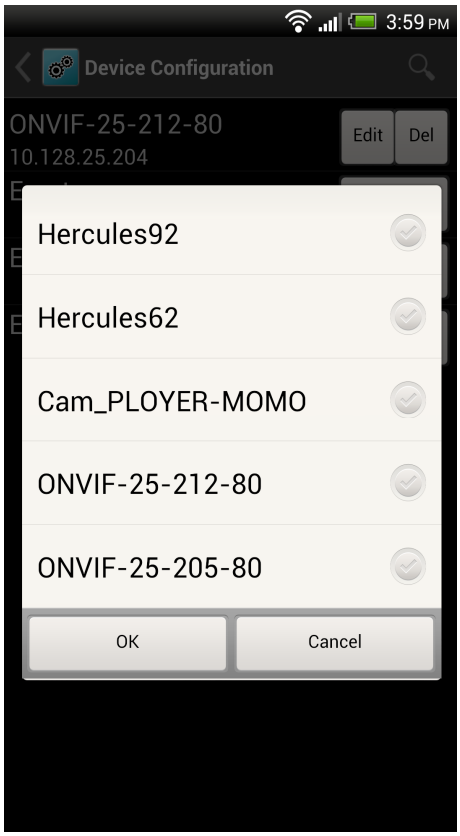

1. Click to search for camera(s) on the same subnet automatically.
2. Select the camera which you want to add to and click [OK].

[NOTE: If is not displayed on the upper right, auto-searching is not supported.]

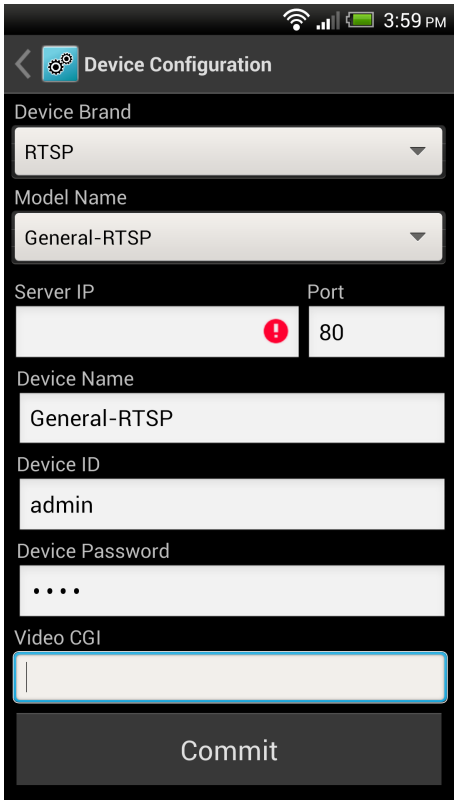

Make settings of a camera

1. Device Brand: Select the camera's brand name which is supported by HISS/HISB.
2. Model Name: Select the camera's model name which is supported by HISS/HISB.
3. Server IP: Type the IP address of camera.
4. Port: Type the port number to connect the camera.
5. Device Name: Type the camera name for viewer to identify this camera.
6. Device ID: Type the ID to login to the camera.
7. Device Password: Type the password to login to the camera.
8. Video CGI: If you use a General-RTSP device, type in the URL or command to acquire video.

© UniSVR Global Information Technology Corporation

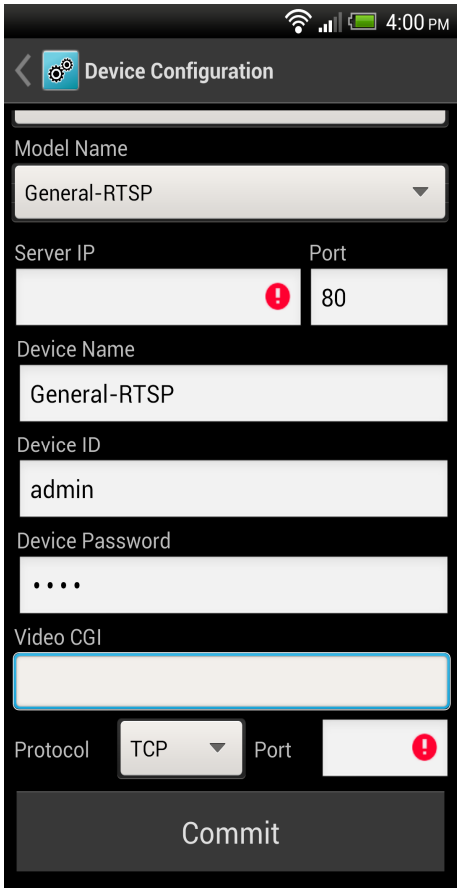

9. Protocol and Port: Select the protocol and the port number for aqcuiring videos.
10. Click [Commit] to make the configurations effective.

Local Viewing

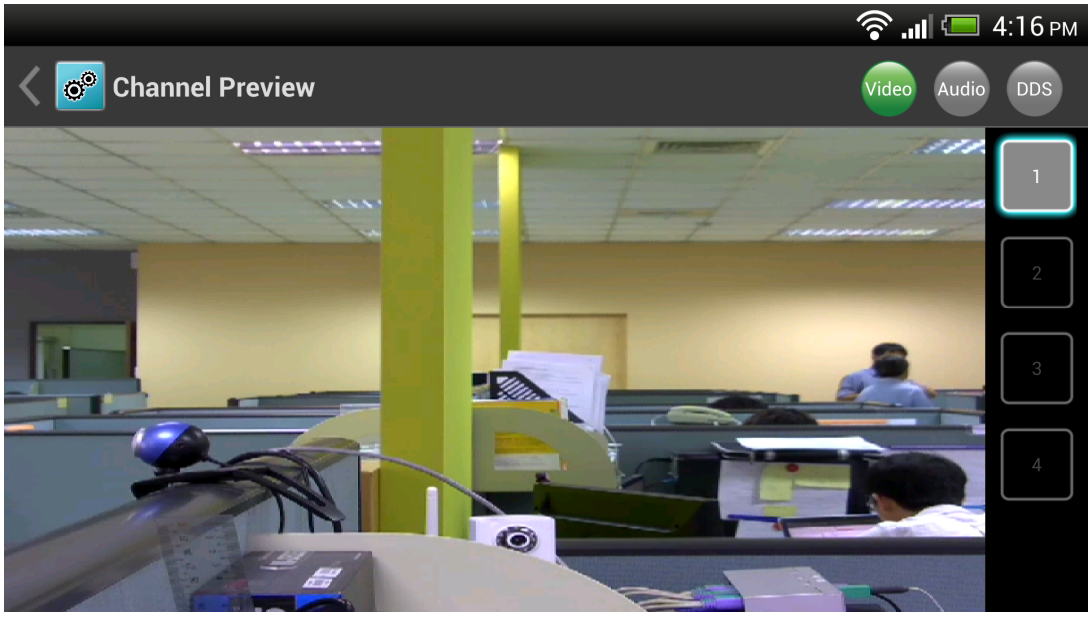

1. Channel 1~4: Click number icons in the right to select the video. The default channel is channel 1.
2. Video indicator: If the indicator is green, the video function is activated; if the indicator is grey, the

© UniSVR Global Information Technology Corporation

video function is inactivated; if the indicator is red, the device is dysfunctional.

3. Audio indicator: If the indicator is green, the audio function is activated; if the indicator is grey, the audio function is inactivated; if the indicator is red, the device is dysfunctional.
4. DDS indicator: If the indicator is green, Hermes DDS Service is activated; if the indicator is grey, HermesDDS service is inactivated; if the indicator is red, logging-in to HermesDDS service has failed.

Network Setting

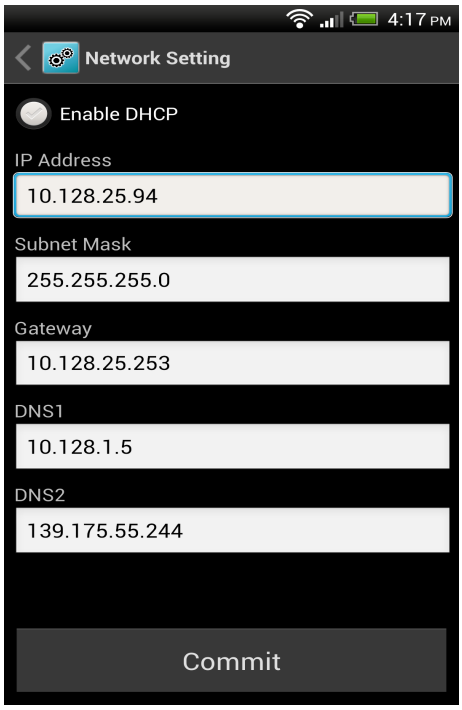

1. Enable DHCP: Acquire the IP address automatically.
2. IP Address: Set the IP of HISB.
3. Subnet Mask: Set the subnet mask of HISB.
4. Gateway: Set the network gateway of HISB.
5. DNS 1: Set the IP address of the DNS server of HISB.
6. DNS 2: Set the IP address of the DNS server of HISB.
7. Click [Commit] to make the settings effective.

© UniSVR Global Information Technology Corporation

Date/Time Settings

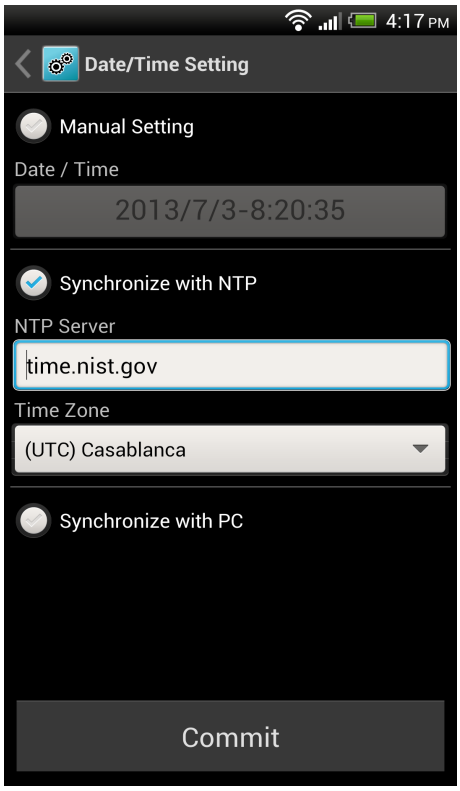

1. Manual Settings: Set the time and date of HISB manually.
2. Synchronize with NTP: You can type the address of time server and select the time zone in the pull-down menu.
3. Synchronize with PC: Synchronize with the time of the Android device.
4. Click [Commit] to make the settings effective.

Maintenance

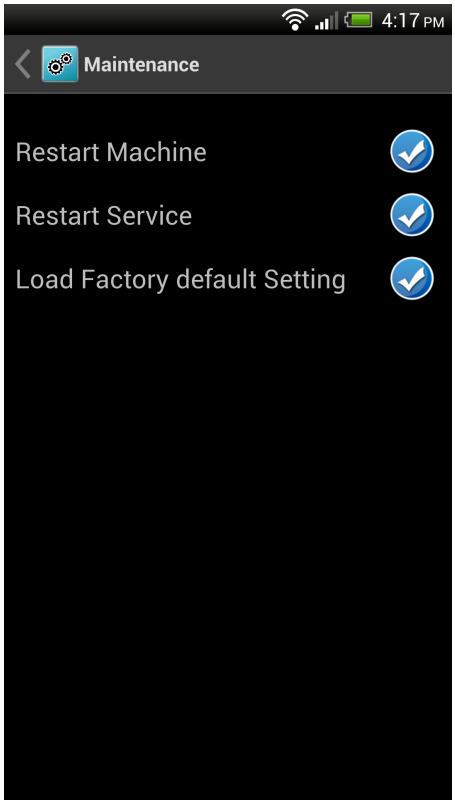

1. Restart Machine: Click to restart HISB.
2. Restart Service: Click to restart the system of HISB.
3. Load Factory default settings: Click to reset to the factory default settings.

© UniSVR Global Information Technology Corporation